

PISTONS ASSEMBLY INSTRUCTION/UNLOCKING

XULT39ECVT
XULT54ECVT
XULT60ECVT

| | | | | | | | | | | | | | | | |
|---|--|-------------|-------|---|--|-------------|-------|---|--|------------------|------|---|--|-------------|------|
| A | | Screw M8X20 | 16pcs | B | | Screw M5x55 | 26pcs | C | | piston | 2pcs | D | | bracket | 2pcs |
| E | | washer | 8pcs | F | | Screw M6x18 | 8pcs | G | | mattress stopper | 2pcs | H | | Screw M5X15 | 4pcs |
| I | | fastener | 2pcs | J | | nut M5 | 4pcs | K | | handle | 1pc | L | | Screw M5x16 | 4pcs |
| M | | wrench | 1pc | N | | L key | 1pc | O | | Mechanism | 2pcs | | | | |





