

Top holes:  
Recommended distance  
from the ground: 130 cm

188


288

# PIERCING TEMPLATE FOR ASSEMBLING THE PULL OUT REVOLVING MIRROR

## Warnings!!!

Before assembling the mirror please check it has not been damaged or broken. In case of break do not assemble it but ask for its replacement.

## RECOMMENDED POSITION

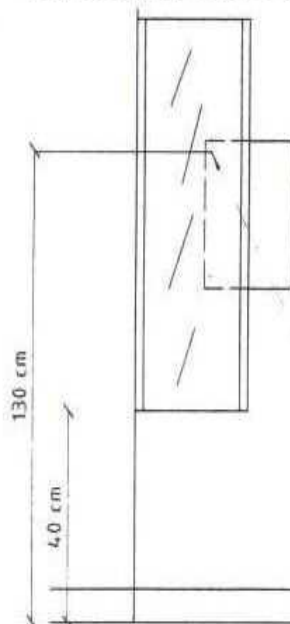

Hole for fixing the runner  
onto wardrobe shoulder

Recommended distance  
from the ground: 130 cm


188

Top holes:

288

1. Fix the sliding undercarriage (composed by n.1 couple of runners fixed onto the plate) to the wardrobe shoulder with self-tapping screws. Please, use the piercing template to pierce correctly.

2. Once the parts have been fixed to the wardrobe shoulders (as upon indicated) insert the adjustable bearing, to which the mirror is fixed. Be careful on inserting the turned pin into the inferior part of the mirror and the fillister screwhead with its relative washer into the superior part.

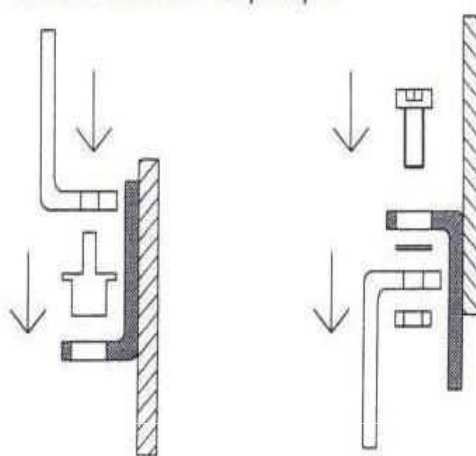

SUPERIOR PART

INFERIOR PART

3. Now the mirror is ready to be used.

Please, remember to close it with the plastic handle to avoid accidental openings.


\*FOR A CORRECT MOUNTING, MOUNT AS SHOWN IN PICTURE N.1 THE FIXING PINS.

480

GABARIT DE PERÇAGE POUR  
L'ASSEMBLAGE DU MIROIR  
COULISSANT ET PIVOTANT

**Avertissement !!!**  
Avant d'assembler le miroir, vérifier  
qu'il n'a pas été endommagé ou  
brisé. En cas de bris, ne l'assemblez  
pas, demandez un remplacement

POSITION RECOMMANDÉE

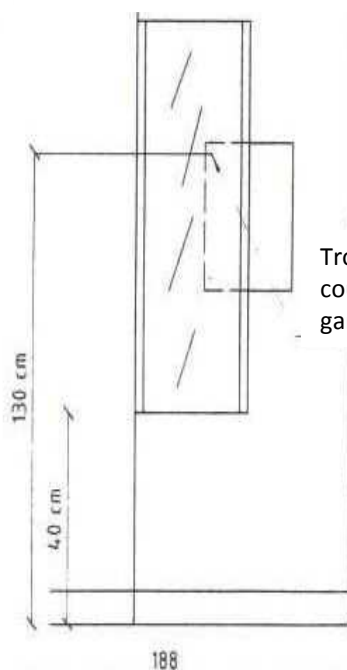

Trou pour fixer les  
coulisses sur l'épaule de  
garde-robe

Trous du haut:  
Distance recommandée  
à partir du plancher :  
130 cm


Trous du haut

Distance recommandée  
à partir du plancher : 130cm

288

1- Fixez les sous-chariots de coulisse (composé d'une paire de coulisses fixée sur la plaque) sur l'épaule du garde-robe avec des vis auto-perçantes. Utilisez le gabarit pour percer correctement.

2- Une fois que ces parties sont installées à l'épaule du garde-robe (comme indiqué plus-haut) insérez la bille ajustable, à laquelle le miroir est fixé. Faites attention de fixer la tige tournée dans la partie inférieure du miroir et la vis avec sa rondelle dans la partie supérieure.

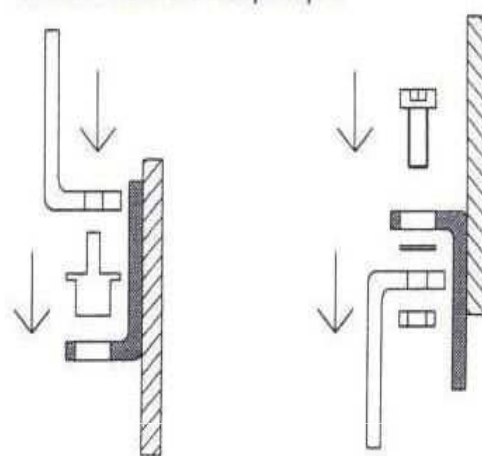

Partie supérieure

Partie inférieure

3- Maintenant le miroir est prêt à être utilisé. N'oubliez pas de le fermer avec la poignée en plastique afin d'éviter des ouvertures accidentelles

\* POUR UN MONTAGE CORRECT, MONTEZ COMME MONTRÉ À LA FIGURE 1, LES TIGES DE FIXATION

288