Panasonic

Installation Manual


Revolving Shoe-Storage System Model No. DVXZXJ0800C-E

To Installer: Make sure to pass this integrated Precautions for Use to the customer after installation.

- ■To ensure correct installation, be sure to read these instructions carefully before you install the Product.
- ■Please properly dispose of the packing materials and residual materials in accordance with legal provisions.

Safety Precautions

Be sure to observe the following precautions.

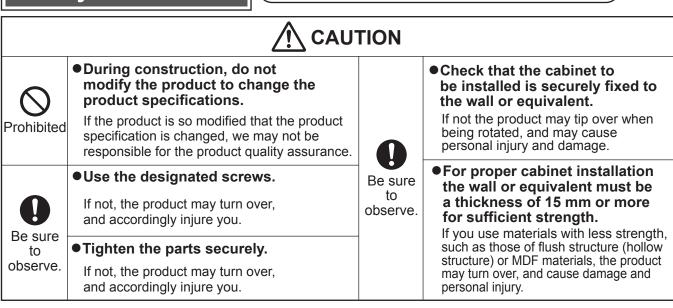

Parts List

The Product components and parts are packaged as shown below. Check the contents.

Part	Quantity	Part	Quantity
Main frame (Top slide rail with upper and lower arms)	1	Shelf board side cap R type (right) (left)	6 each
Top/bottom fixed rails Top fixed rail Bottom fixed rail	1 each	Shelf bracket (for askew mounting) L type (left) R type (right)	5 each
Bottom slide rail	1	Shelf bracket (for horizontal mounting)	2
Fall prevention bar	6	H type (horizontal	
Handle	1	mounting screw Pan head 3.5 x 16	12
Shelf	6	Arm screw (with spring washer, washer, and bush) Pan head M5 x 10	2 each

Confirmation Prior to Installation


[Dimensional unit: mm]

■ Confirm internal dimension of cabinet in which Revolving Shoe-Storage System will be installed.

Internal Dimension of Cabinet

- ① Height, H = 1000mm (± 1mm) limited
- ② Minimum Depth Dimension, D = 365mm
- ③ Minimum Width Dimension. W = 800mm


This Revolving Shoe-Storage system can be installed in cabinets with a depth (D) greater than 365mm and width (W) greater than 800mm. You should carefully consider your design, and ensure that you follow all of the instructions and placements noted in this manual, regardless of your cabinet size. It is not recommended that cabinet depth (D) exceed 600mm.

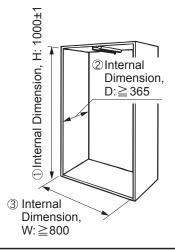

Dimensional Drawing

[Dimensional unit: mm]

Example of installation in storage cabinet (internal dimensions W800 x H1000 x D365)

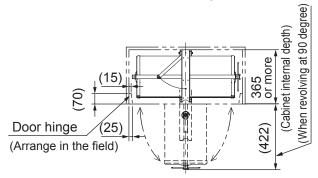


(Recommended) Cabinet Internal Depth


Greater than 365 \sim Less than 600

CAUTION

Do not mount the door hinge at the handle mounting height (hatched area* in the drawing).


If you do this, the handle may interfere with the door hinge when revolving.

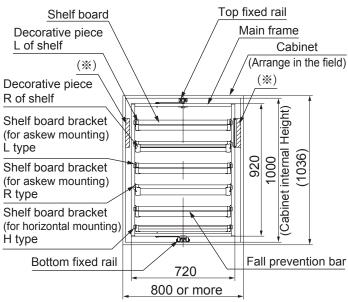

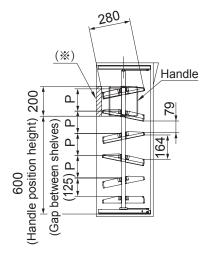

Gap between shelves P: 150mm (Can be adjusted on site)


■Mountable door hinge reference

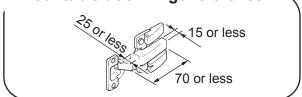


^{*}Do not install cabinet with dimensions other than those prescribed. Otherwise this may cause Product failure.


Configuration

1 Installing top fixed rail

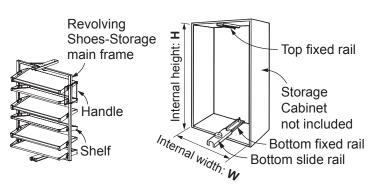


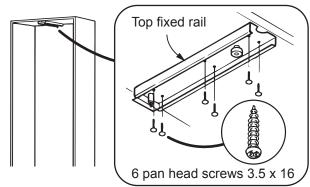

2 Installing bottom fixed rail and bottom slide rail

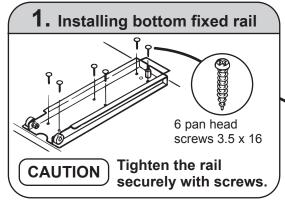



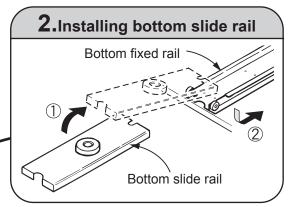



Top/bottom fixed rail component mounting position


CAUTION

For both top and bottom fixed rails, no notable positional displacement is allowed in the horizontal or vertical direction.

A large positional displacement between the top and bottom rails, if any, may cause noise or failure of the unit when rotating it.

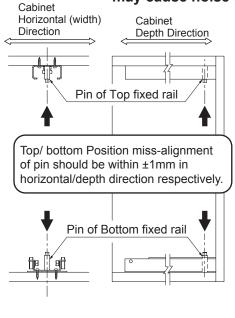

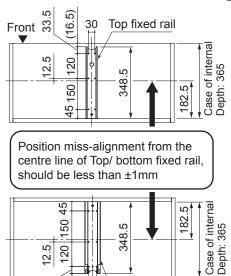

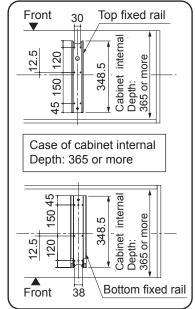

*Make the cabinet inclination in horizontal or vertical direction less than 1mm.

Front


*If the dimension of the internal cabinet depth is greater than 365mm, be sure to install main frame to fit the center position of cabinet.

Bottom fixed rail

16.5)

3 Installing main frame

Mount the upper and lower arm on the top and bottom fixed rails.

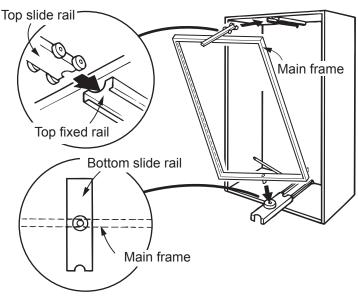

Align the main frame to the bottom slide rail groove in the right direction.


! CAUTION




Be sure to observe.


Fix the mounting screws firmly. (Tightening torque: 15 to 20 kgf·cm)

If not, the main frame may fall, and erve. injure you.

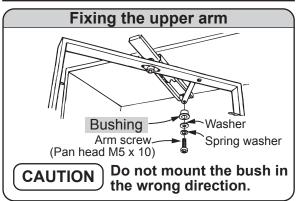

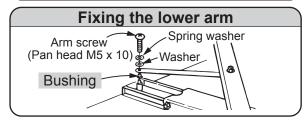

4 Installing Shelves and Fall Prevention Bars

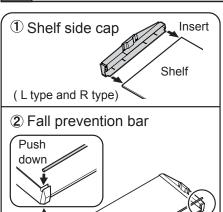

3 Shelf bracket
Insert Shelf bracket
(L type and R type)

Fall prevention bar


4 Installing shelf onto main frame Groove

■Assembling Shelves

- ① Insert both shelf board side caps (L type and R type) into each shelf.
- 2 Insert the fall prevention bar into the groove at the front of each shelf side cap, and click into place.

■Installing Shelves onto Main Frame

- 3 Insert the shelf bracket (L type and R type) into both left and right holes of the main frame.
- Slide the shelf down and engage the shelf brackets with the grooves at both ends of the shelf. To remove the shelf, do the above operation in the reverse order.

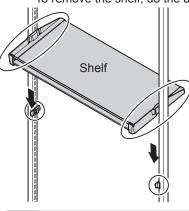

CAUTION

- When installing the shelves, alternate the position of the Fall Prevention Bar (back to front) for each consecutive lower shelf.
- The very bottom shelf is mounted in a fixed horizontal position.

 Mount this bottom shelf using the H type shelf bracket.



5 Installing the handle

- Handle mounting screws are pre-mounted on the main frame.
- Remove the screws and position the handle as shown. Reinsert the pre-installed screws.

Handle mounting screw (Pan head tapping screw type III: nominal size 4 x 16)

